



# Timestrip® PLUS™

## +8°C Temperature Breach Indicator

Timestrip® PLUS™ is a cost effective single-use indicator, design to register temperature breaches above +8°C.

Ideal for cold chain monitoring requirements, Timestrip® PLUS™ provides immediate indication of a temperature breach, using a period window to show the total duration of breach during transportation. Ideal for storage and distribution activities that require below +8°C threshold, Timestrip® PLUS™ can support thermal transportation of vaccines, TPN, cytotoxics, insulin, antibiotics and other temperature sensitive products.

Small and compact with an adhesive back, Timestrip® PLUS™ can be securely applied to different types of product. The indication window is easy and simple to understand and activation begins with a simple squeeze of the blister. As long as the transported product is held at, or under the temperature threshold the period window will remain white, changing to blue only once a temperature breach has occurred.

Timestrip® PLUS™ offers essential support for accurate monitoring of both large and small cold chain logistic operations.


### Features and Benefits

- ✓ Accurate temperature monitoring
- ✓ Simple to activate and apply
- ✓ Easy visualisation of temperature breach information
- ✓ Water resistant
- ✓ Environmentally friendly

### Ordering Information

#### TP065

Timestrip® PLUS™ +8°C  
non sterile • 100 pcs/pck

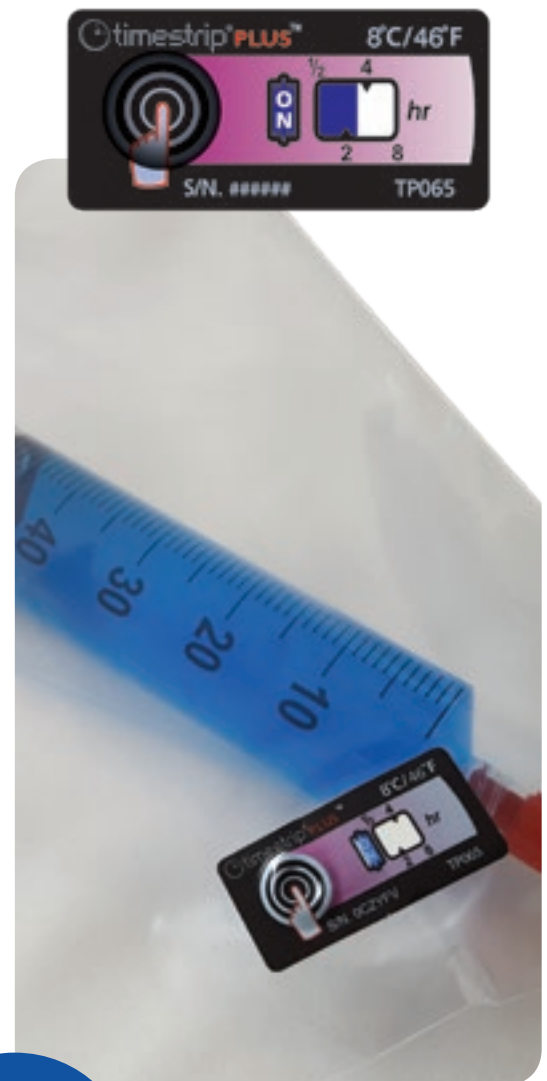

TP065

Enquire  
today for  
**FREE**  
samples



## Technical Data

Material	Polymeric assembly multilayer and aluminium-plastic laminate
Threshold Temperature	+8°C
Activation Temperature	Room temperature (Preconditioning required, please follow instructions below)
Temperature Accuracy	± 1°C
Storage Recommendations	Store in a cool, dark environment +22°C at 20-80% RH
Toxicity	Non-toxic, latex free and PVC free
Adhesive material	Medical grade permanent tape
Dimensions (d x w x h)	19mm x 40mm x 0.5mm
Packaging	100 x individual pieces in re-sealable polybag; 1 x polybag per pack
Shelf Life	2 years from date of manufacture

## Activation Instructions

### 3 steps for accurate temperature monitoring

**TimeStrip® PLUS** is a cost effective, single-use temperature breach indicator that helps you to monitor temperature sensitive materials during transport.

Use these three simple activation steps and TimeStrip® PLUS will accurately monitor temperature breaches above +8°C for days, weeks or months, depending on your needs.



**1. Activate:** Squeeze the **TimeStrip® PLUS** blister at room temperature.



**2. Precondition:** Place your TimeStrip® indicator immediately into a fridge or cool place at **6°C /43°F** along with your product for a minimum of 1 hour.



**3. Apply:** After preconditioning use the adhesive liner at the back of the **TimeStrip® PLUS** indicator to apply it to the product. When the threshold temperature has been breached the blue front will move across the scale on the second window showing cumulative time it has been exposed above this threshold.

As long as the product is held under the 8°C threshold temperature, the blue indicator will not progress to the second window, providing an easy-to-use visual aid. Request further information and FREE samples by contacting **0800 0328 428** or email **sales@helapet.co.uk**

Helapet Limited

Lister House | Blackburn Road | Houghton Regis | Bedfordshire | LU5 5BQ

**Web:** helapet.co.uk | **Phone:** +44 (0)1582 501980 | **Email:** sales@helapet.co.uk

Helapet Limited is a Clinimed Group Company.

